

USING THE WARHAMMER® COCKING WINCH DEVICE



Step 1: Ensure that the safety switch is in the “FIRE” position before attempting to cock the crossbow. (FIG. A) If the safety switch is in the “SAFE” position (FIG. F) move the safety switch to “FIRE” position. (FIG. A)

Step 2: With the crossbow pointing downwards and the foot stirrup making contact with the ground, place the cocking device into the hole located on top of the stock. (FIG. B & B2)

Step 3: Place one foot in the foot stirrup so the crossbow is secure against the ground. Press the release button with one hand while pulling the cocking sled with the other hand toward the bowstring. (FIG. C & C2)

Step 4: Place the cocking sled over the bow string so that both protruding catches on bottom of sled capture the string. (FIG. D) Turn the crank wheels slightly by hand to put tension on the draw cord to ensure the sled holds firmly on the bowstring. (FIG. D2) Ensure that the cocking mechanism is fully seated in the hole before proceeding. (FIG. D3)

Step 5: Attach crank handle to either side of the cocking winch for right or left handed use. Line up silver pin on crank handle with one of the small holes on the crank wheel and make sure handle is installed firmly so it will not slip off while cranking the crossbow. (FIG. E)

Step 6: Start cranking while holding the butt stock with the other hand. (FIG. E2) Make sure to use a controlled, smooth motion. **To ensure the crossbow is fully cocked, visually inspect that the safety selector is fully moved into the “SAFE” position. Visual inspection is required!** (FIG. F)

Removing the sled after the crossbow is cocked: (SEE WARNING BELOW)

Step 7: While applying slight pressure on the crank handle, press the release button and turn the crank handle the opposite direction used to cock the crossbow until the sled clears the front of the scope rail. Then, remove the cocking winch device from the crossbow. (FIG. G)



WARNING: DO NOT PRESS THE RELEASE BUTTON (SEE FIG. G) UNTIL THE CROSSBOW IS FULLY COCKED, THE STRING IS LOCKED AND THE SAFETY HAS MOVED TO THE “SAFE” POSITION!! (AS SHOWN IN FIGURE F)

Do not use this cocking device to uncock your crossbow as it may cause serious injury or damage to the crossbow. The only safe method to uncock a crossbow is with a Discharge bolt or safely shooting a standard bolt into a target. Never attempt to shoot the crossbow with the cocking device attached! To avoid serious injury, never place your foot or other parts of your body in the path of the bowstring while cocking and please wear safety glasses. Always inspect the cocking rope for worn or damaged parts before use. If worn or damaged, do not use the cocking device. Use of a damaged cocking device could lead to serious injury or death. You may purchase replacement cocking devices at your PSE Archery dealer. Visit www.pse-archery.com/dealer-locator to find your nearest PSE dealer.



Fig. A



Fig. B



Fig. B2



Fig. C

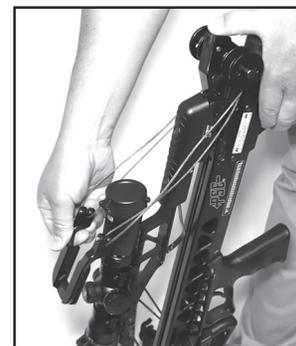


Fig. C2



Fig. D



Fig. D2

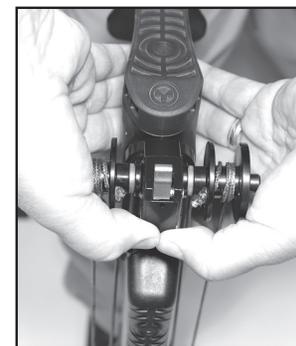


Fig. D3

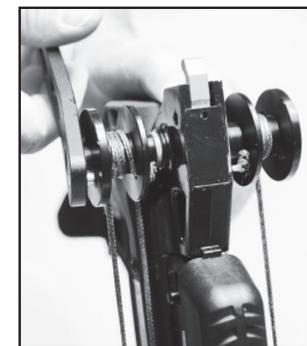


Fig. E

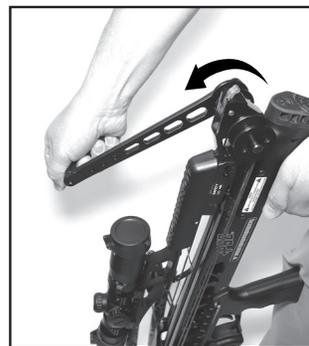


Fig. E2



Fig. F



Fig. G